


* CEI-110 Straight Connection


1. Insert TSRV4 Bracket into center groove & V4 Connector into front groove of extrusion.
2. Slide Connecting extrusion over exposed end of bracket & connector.

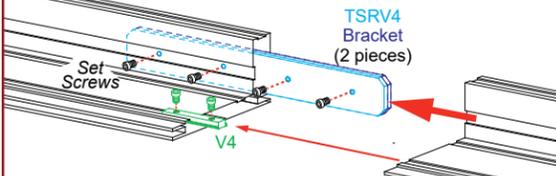


3. Use Set Screws to secure extrusions.

* CEI-110 Corner Connection

- 1) Insert TSRV2 and A1 Brackets into milled groove of extrusion.
- 2) Slide connecting extrusion over exposed end of brackets.
- 3) Use Set screws to secure extrusions.

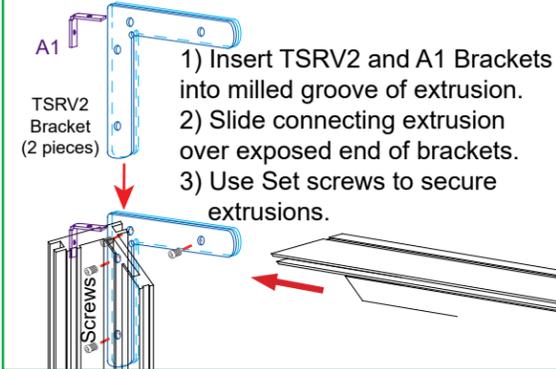


* Frame to Wall Attachment Detail

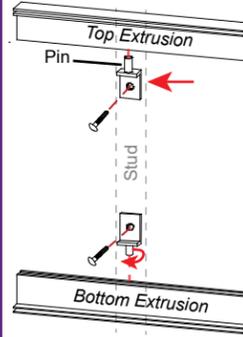


Wall Mounting Bracket
Screw brackets to wall.
Note: must attach to stud.
Hang top extrusion from bracket with pin inserted into groove. Spin bottom bracket to insert pin into groove of bottom extrusion.

* Transformer Wall Mount

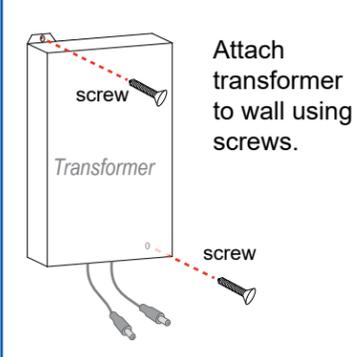

Attach transformer to wall using screws.

Item	Qty.	Description
1	1	50" h CEI110 Vertical Extrusion
2	1	50" h CEI110 Vertical Extrusion
3	1	59.5" w CEI110 Horizontal Extrusion
4	1	59.5" w CEI110 Horizontal Extrusion
5	1	59.5" w CEI110 Horizontal Extrusion
6	1	59.5" w CEI110 Horizontal Extrusion
7	1	46.353" h Z45 Vertical Extrusion
--	12	TSH1 Wall Bracket

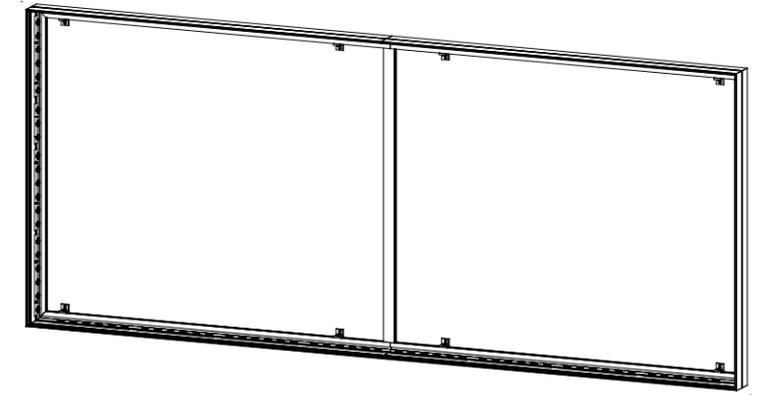


When assembled


Steps:

- 1) Assemble horizontals [3-4], [5-6] together using straight connectors. See **CEI110 Straight Connection** detail.
- 2) Connect verticals [1,2] between horizontal assemblies [3/4], [5/6] using corner connectors. See **CEI110 Corner Connection** detail.
- 3) Attach vertical [7] between horizontal assemblies. See **Z45 Attachment** detail.
- 4) Connect power cords to Supernova lights as shown.
- 5) Attach Frame and Transformer Wall Bracket to wall. See **Frame-to-Wall Attachment** & **Transformer Wall Mount** details.
- 6) Apply SEG Graphic to front of assembled frame.

Assemble frame flat on ground.

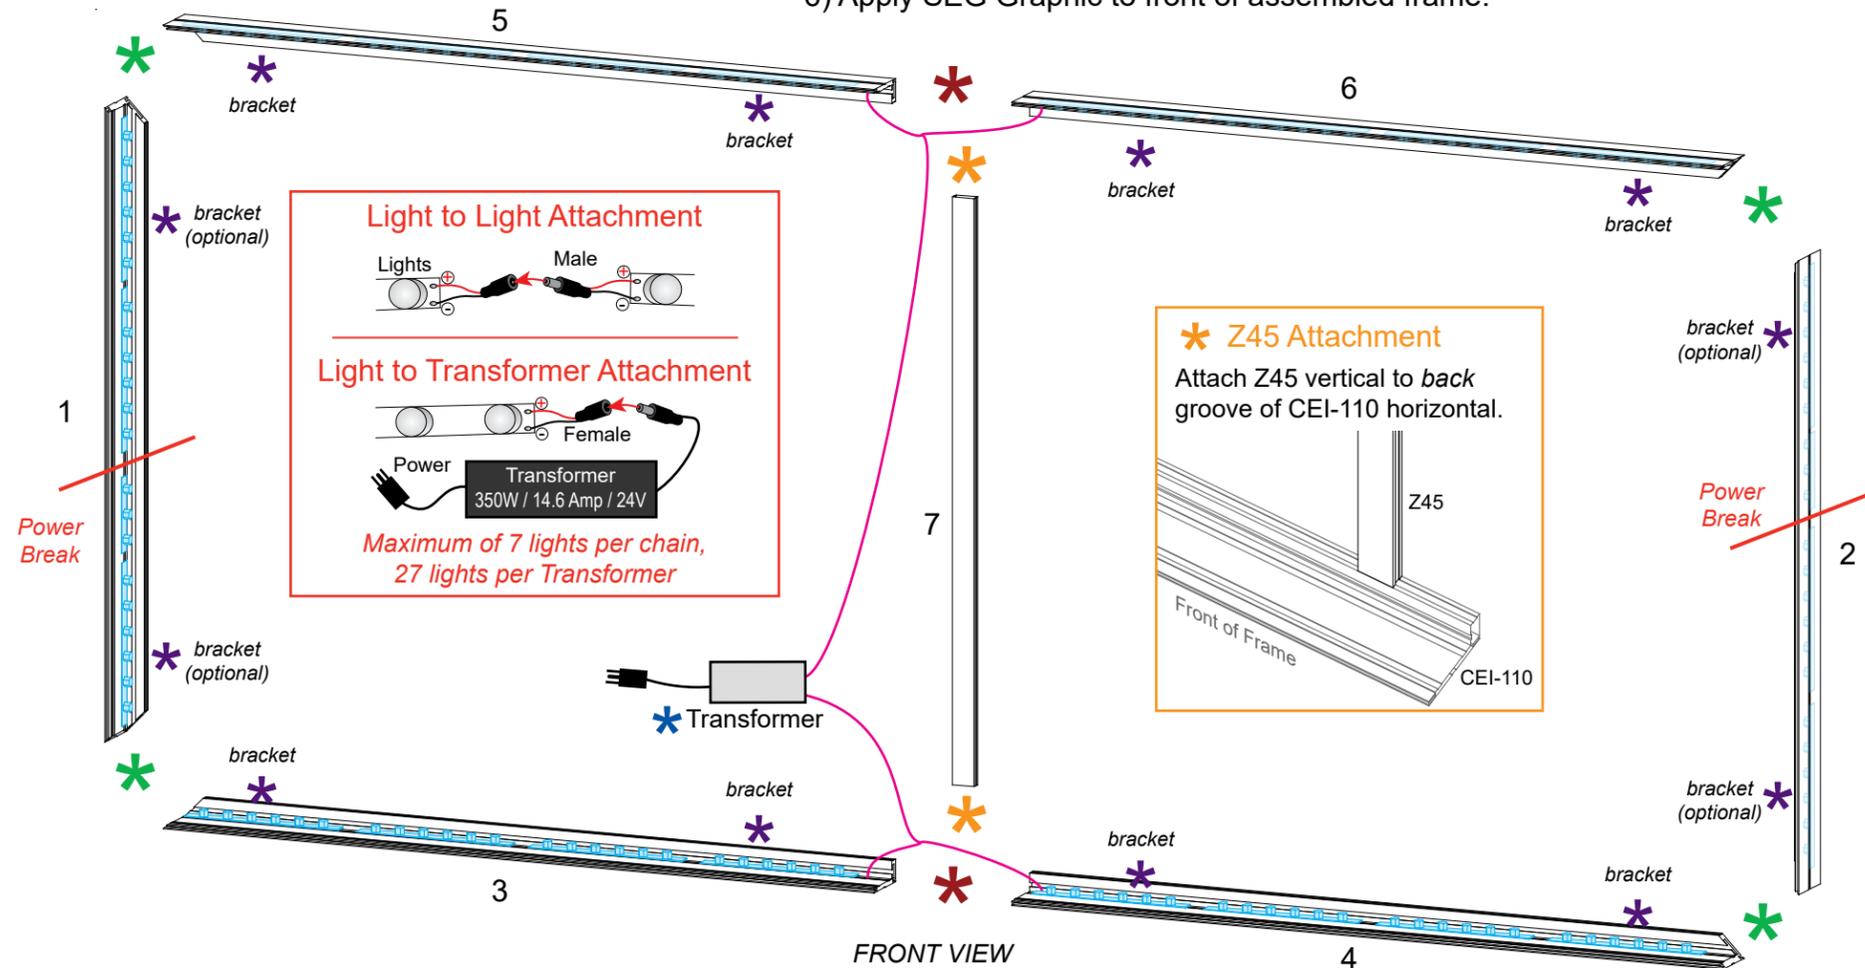

SEG Graphic Installation

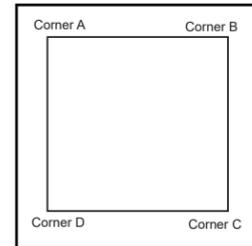

It is important to first insert graphic into each alternate corner, then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.




Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.



Step 2
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.

Graphic Removal

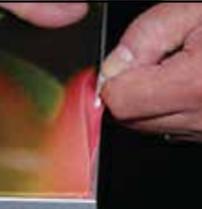

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.



Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

SETUP INSTRUCTIONS